

# Custommea

## INSTALLATION GUIDE FOR CUSTOM-SIZE DOORS

IMPORTANT NOTE: These instructions are for customers who have purchased new hinges and drilled doors from Custommea.

### TOOLS & HARDWARE REQUIRED

- Phillips Head Screwdriver
- Level
- Pencil
- Tape measure
- Drill
- 5mm Drill bit
- Hinge Template E.g. Plate Mate (can be purchased from Custommea separately)

### STEP 1: IDENTIFY YOUR HINGES & HINGE PLATES

The hinges we provide are soft-close BLUM hinges. You will receive the hinge (which is to be placed in the hinge hole cut-out) as well as the hinge plate that is to be attached to the cabinet shell.

Standard Hinges

Corner Door Hinges

### STEP 2: ATTACH HINGES TO YOUR DOORS

NOTE: No tools or screws are required for this step.

Ensure the Hinge is in the open position. (IMAGE OF OPEN/ CLOSED HINGE)

Ensure the Flange is up.

Align the open hinge (with flange up) to the hinge hole cut-out.

Once the hinge is placed in the cut-out, press down firmly until the hinge is sitting tightly and evenly in the cut-out.

To secure the hinge in place, push down the Flange.

Custommea

[info@custommea.com.au](mailto:info@custommea.com.au) | [www.custommea.com.au](http://www.custommea.com.au)

### STEP 3: INSTALL THE HINGE PLATES ON YOUR CABINETS



You have to determine the thickness of your carcass most carcasses in Australia are made of 16mm particle board. If that the case the follow the instructions from step 1.

For all other thickness follow the instructions from step 2.

#### **Option 1:**

Using the hinge plate.

- The plate measures 84mm high to easily mark 100mm centres from inside the carcass/cabinet that are 16mm thick (most used position for a wide range of concealed hinges).
- Put the plate against the top/bottom and mark a line with a pencil. (Image 1)
- Align the centre of the plate to the line and mark the 2 holes at 20mm and 52mm. (Image 2)
- Drill the holes with a drill and a 5mm drill bit to at least 13mm deep.
- Once that's done simply install the hinge plate and secure it by tightening the 2 screws.

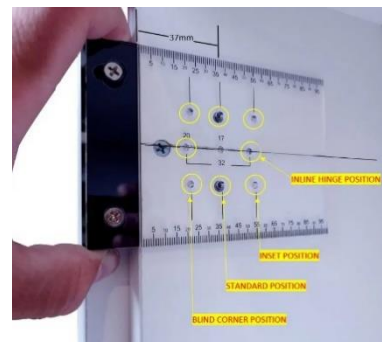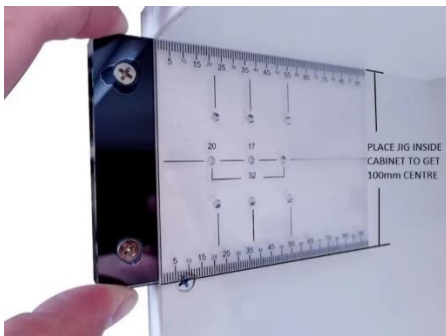

#### **Option 2:**

- Measure from the top of the cabinet 100mm and mark a line with your pencil.
- Align the centre of the plate to the line and mark the 2 holes at 20mm and 52mm. (Image 2)
- Drill the holes with a drill and a 5mm drill bit to at least 13mm deep.
- Once that's done simply install the hinge plate and secure it by tightening the 2 screws.
- Repeat the process from the bottom for bottom hinge.

*Custom*mea

[info@customea.com.au](mailto:info@customea.com.au) | [www.customea.com.au](http://www.customea.com.au)